

You can also use the buttons on the remote control to operate the Lamp.

ON:	Turning on the light on.
OFF:	Turning the light off.
Flash:	Flash colour changing.
Smooth:	Smooth colour changing.
Strobe:	Strobe colour changing.
Fade:	Fade colour changing.
Bright±:	Change single colour brightness.
Colour but	ttons: Select the desired colour from 16 colours.



SPECIFICATIONS

Power Adapter Input:100-240V / AC, 50/60HzPower Adapter Output:5V / DC , 1000mA

CLEANING

Clean the Lamp with a dampened cloth. Do not use chemical solvents or strong detergents as these may damage the cosmetic finish.

Do not expose the power supply charging unit to water.

THE ENVIRONMENT

When this product reaches the end of its useful life, hand it in at a collection point for the recycling of electric and electronic equipment. Please refer to the symbol son the product, the users instructions or the packaging. Contact your municipality for the address of the appropriate collection point in your neighbourhood.

WARRANTY

Warranty with 2 years.



IMPORTANT SAFETY INSTRUCTIONS

WARNING:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of
 experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person
 responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

USING THE CHARGER:

- The charger is for indoor use only and must not be used outdoors or exposed to wet conditions. Check that the voltage marked on the
 rating label located on the power adapter is the same as your mains supply.
- The manufacturer will not accept responsibility for damage or injury caused by connecting to the wrong voltage.
- If the charger is damaged, it should be replaced with a charger of the same type and rating to avoid ahazard.

BATTERY HANDLING AND USAGE:

- Internal battery:
- The product is supplied with a rechargeable lithium-ion battery incorporated in the article which is not accessible and cannot be replaced. Therefore, when the product reaches the end of its useful life it must be disposed of at a recycling center.

CHANGING THE BATTERY ON THE REMOTE CONTROL:

- Only adults should handle the battery. Do not allow a child to use the remote control unless the battery holder is inserted.
- Install batteries as indicated by the(+/-)polarity signs.
- Remove empty batteries and/or batteries which have not been used for an extended period.
- The battery used in the remote control is a 2x3AAA battery.
- Never recharge non-rechargeable batteries.
- Never dispose of batteries in a fire.
- These actions may cause the batteries to explode.
- Do not throw away batteries; dispose of as small chemical waste.

CHARGING THE PRODUCT FOR THE FIRST TIME:

- Turn the ON/OFF button on the base of the Lamp to the OFF position before charging.
- Remove the cover of the DC jack input socket and connect the charger cable to the DC jack input socket on the Lamp and plug the charger into the mains supply.
- The Lamp should be charged for at least 8 hours for the first time. After the initial charging, the Lamp will take about 6 hours to recharge.
- After the lamp is charged, place the cover on the DC jack input socket on the Lamp

OPERATION

The Lamp is waterproof and is designed for outdoor and indoor use.

Operating the Lamp:

The Lamp is operated by repeatedly pressing **MODE** button on the base of the product to select the desired colour change and mode.

- Smooth colour changing.
- Flash colour changing.
- Strobe colour changing.
- Fade colour changing.
- Lighting turn off.
- 16 fix colour changing.
- ON / OFF switch button.





