

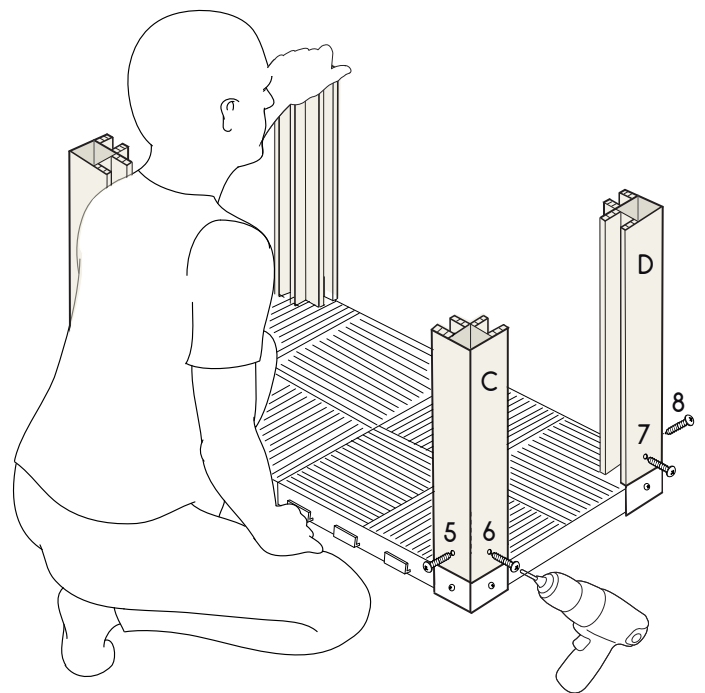
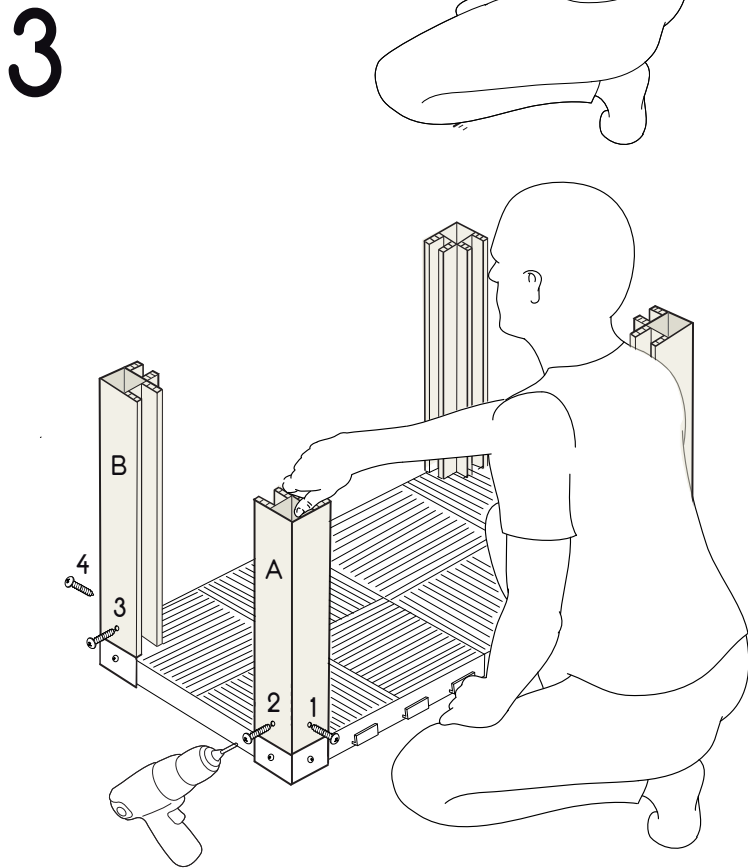
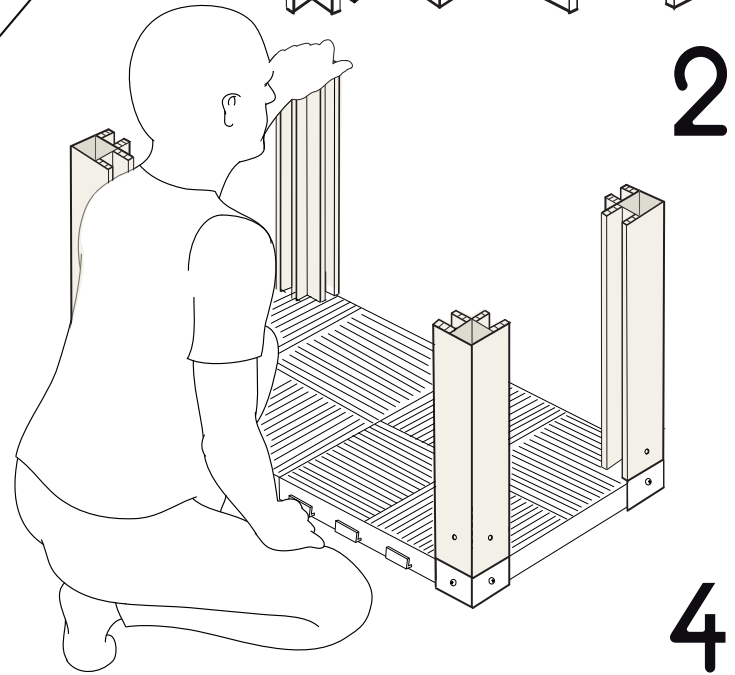
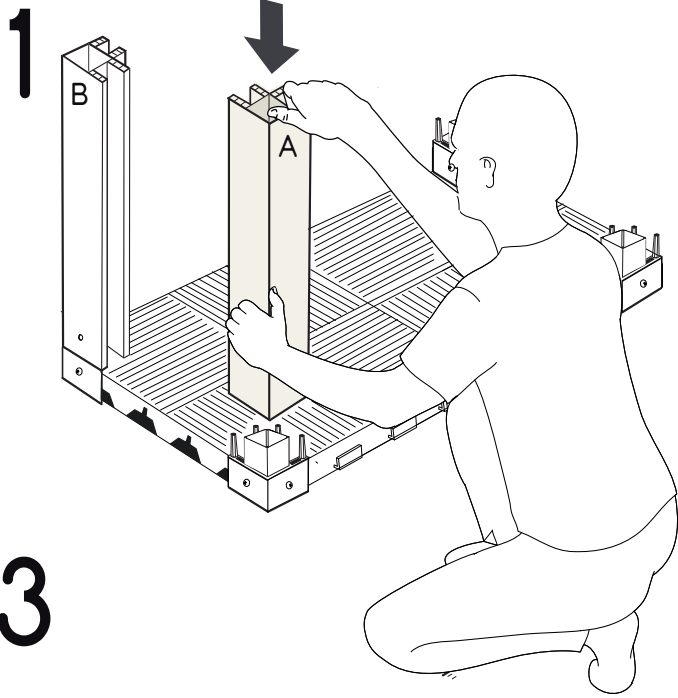
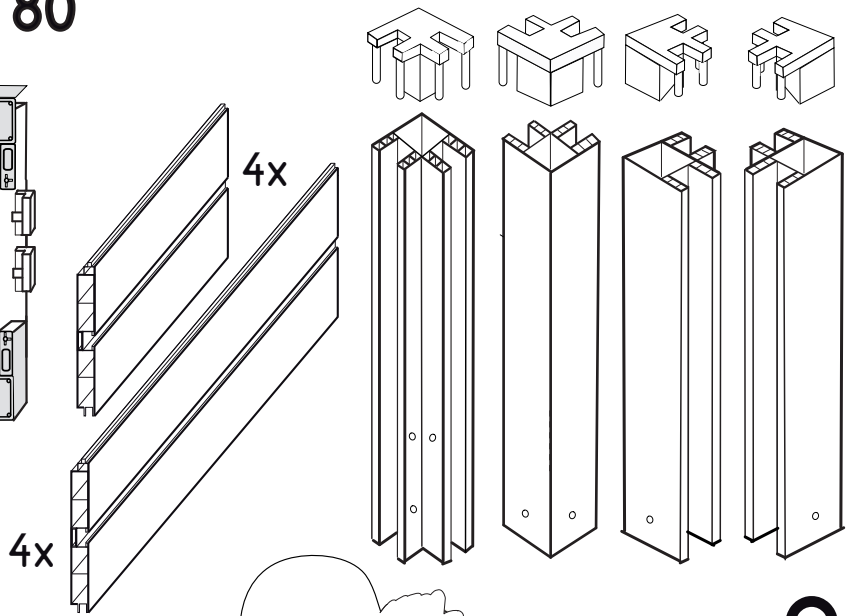
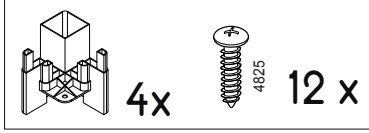



MONTAGGIO FLORI' EVO 80

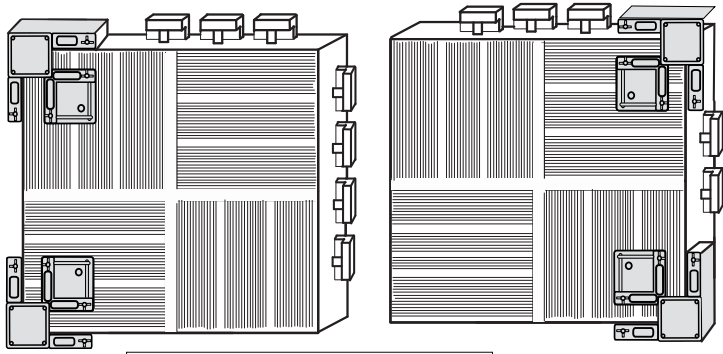


5

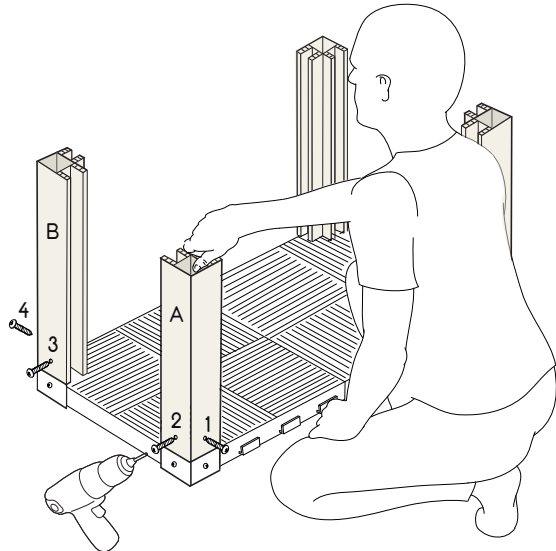


6

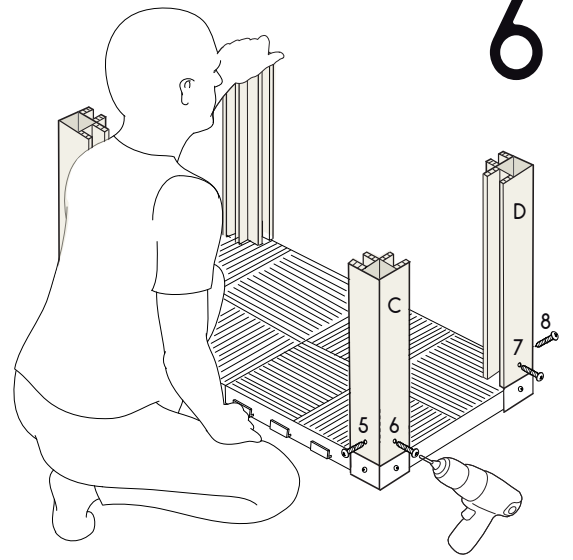




7

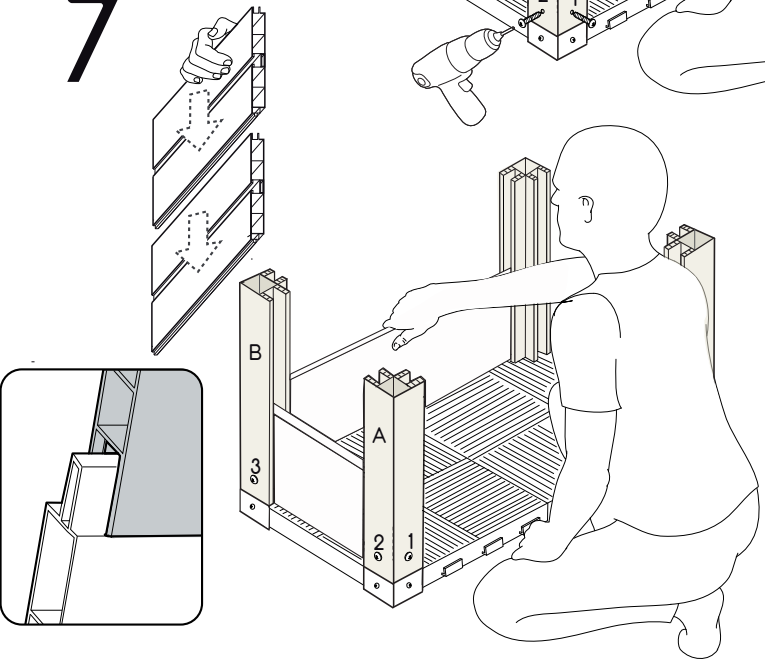


8

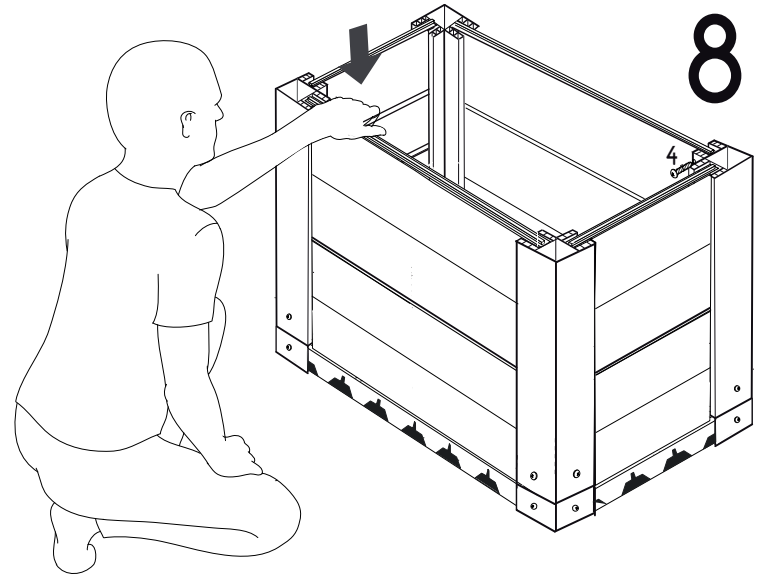

9

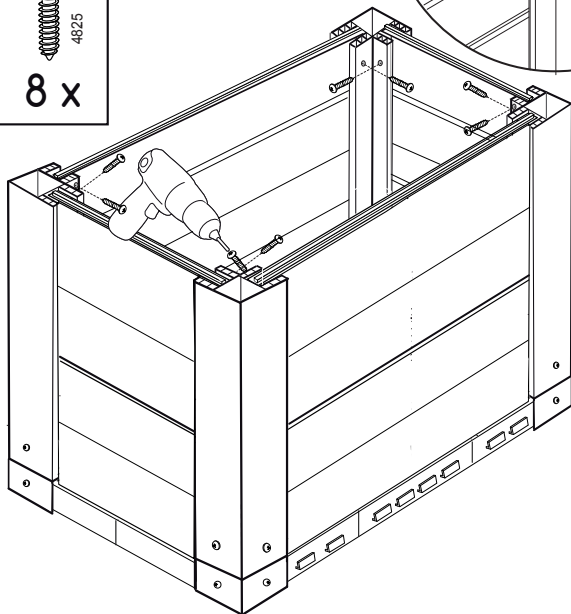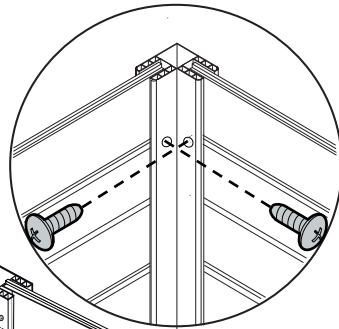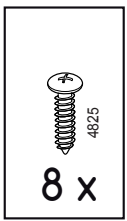

10

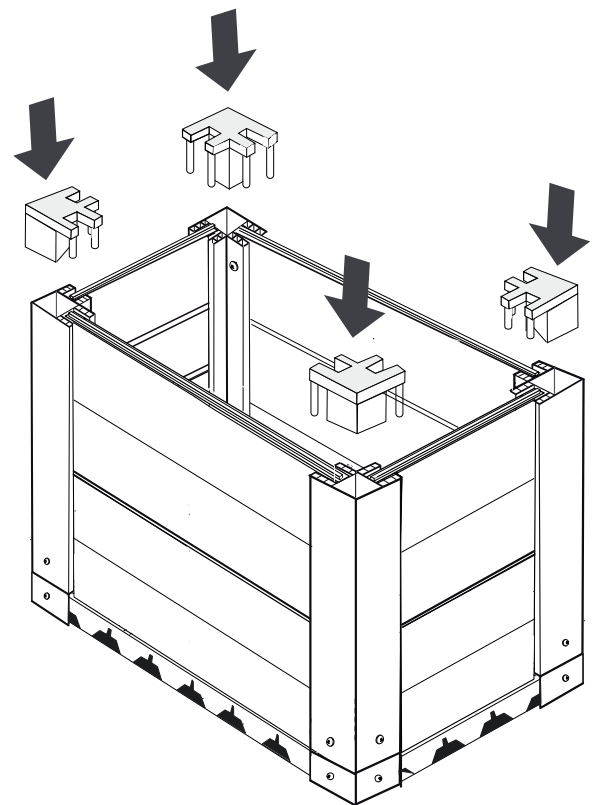

2