

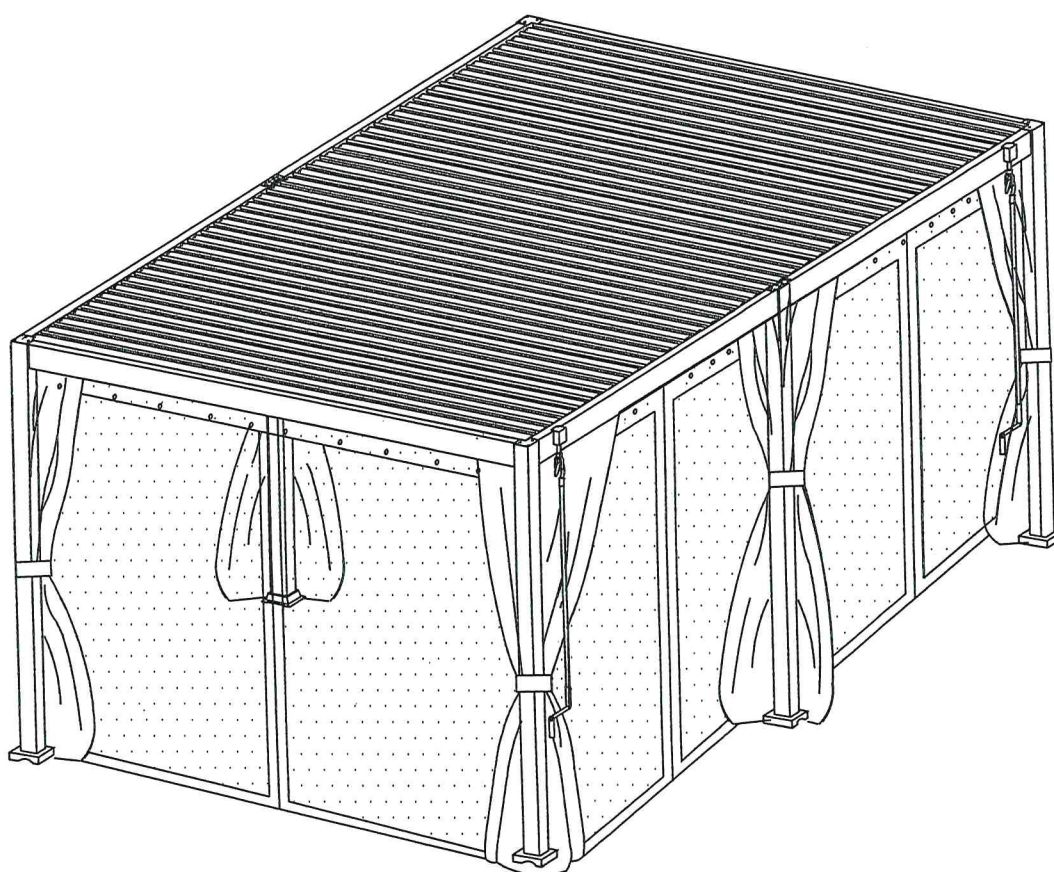










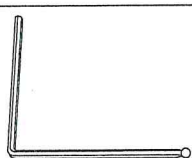





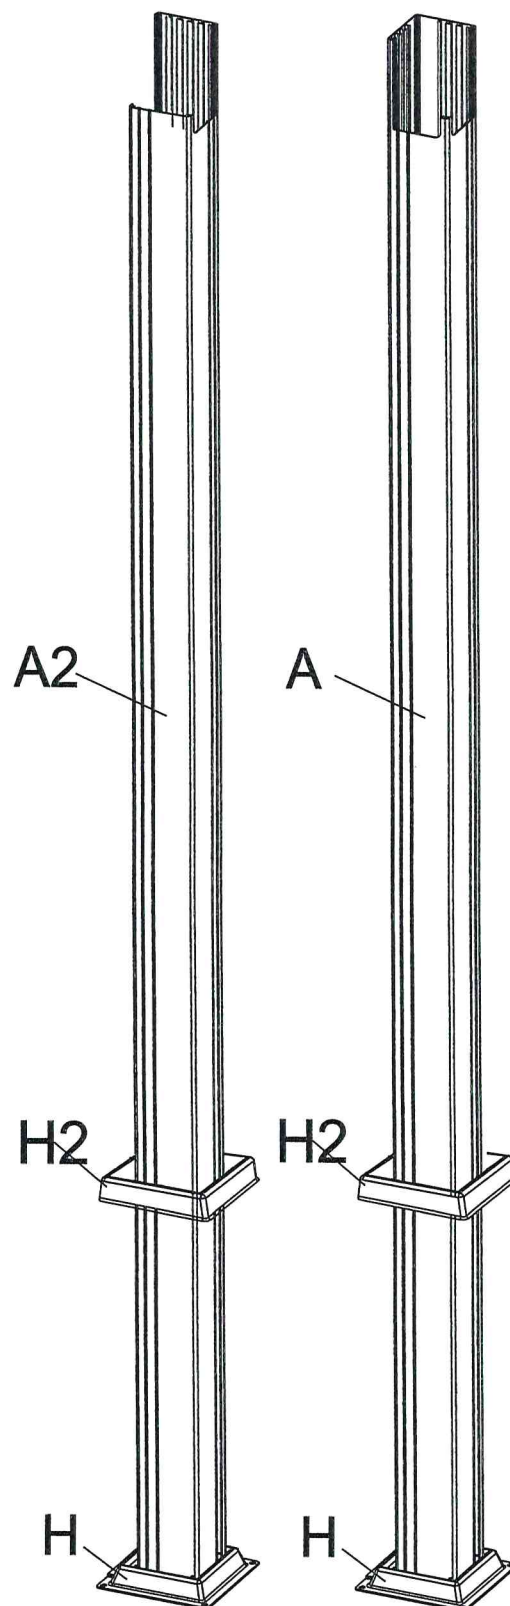



ISTRUZIONI DI MONTAGGIO DEL GAZEBO GAZ 526

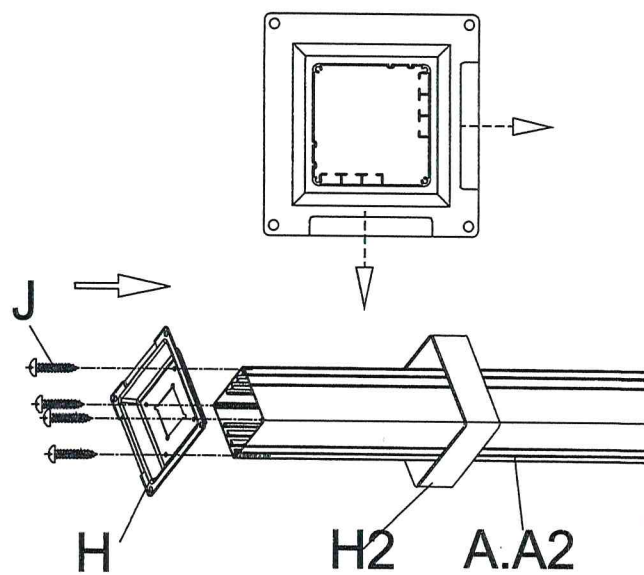




 A (x4)	 A2 (x2)	 B1 (x1)	
		 B2 (x1)	
		 C1 (x1)	
		 C2 (x1)	
		 E (x2)	
 F (x38)		 G (x4)	
 H (x6)	 H2 (x6)	 I (x2)	 M4.2x25 J (x40) +2
 M6x17 K (x100) +5		 M6x62 L (x24)	
 N (x2)		 O (x1)	
 M4x22 M (x2)		 M6 P (x2)	
 M8 Q (x1)		 R (x1)	
 S (x76)		 T (x52)	
 U (x120)		 V (x2)	
 V1 x2		 V2 (x6)	
 W (x6)			


PASSO 1:

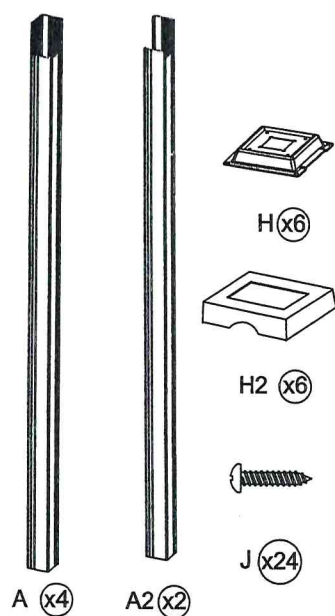



PASSO 2:

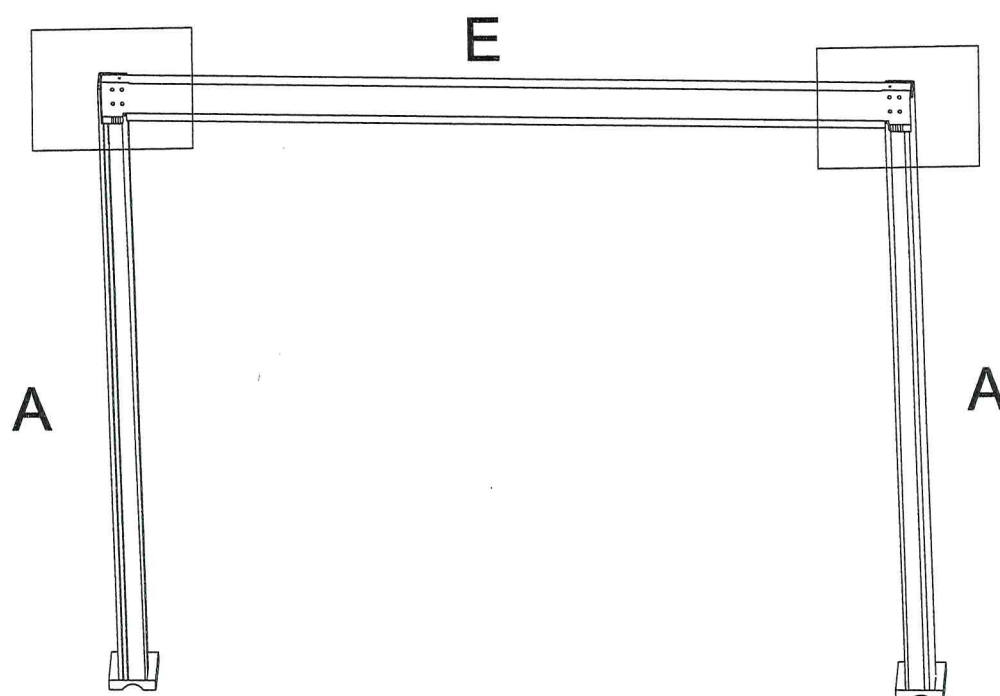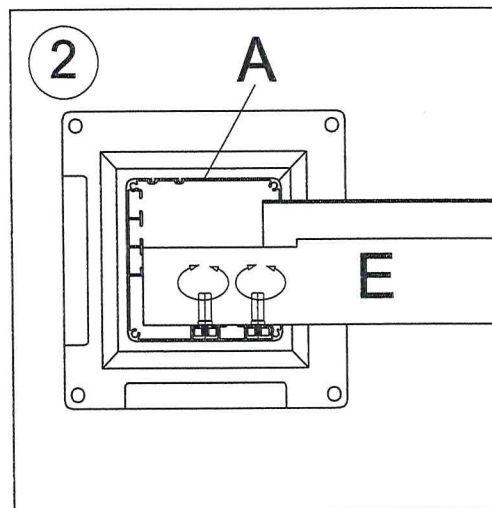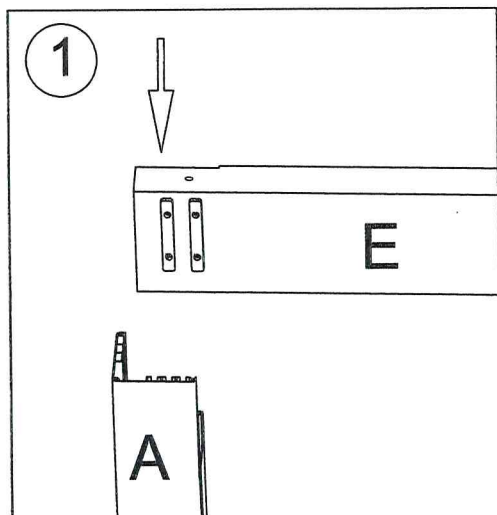

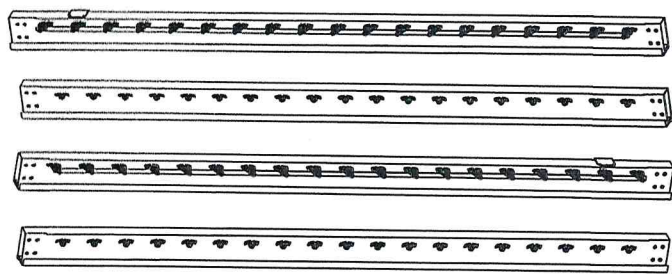


B1(x1)

C1(x1)

B2(x1)


C2(x1)



V (x2)






K (x16)







V1(x2)

PASSO 3:

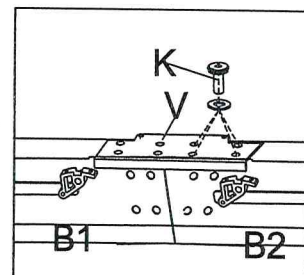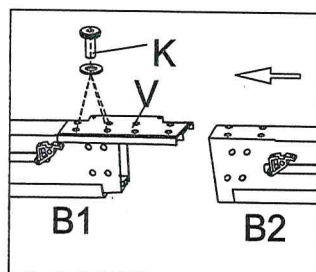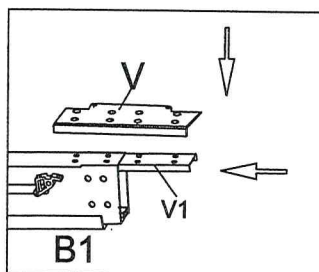


non stringete completamente le viti

ora stringete tutte le viti

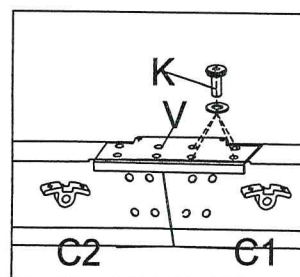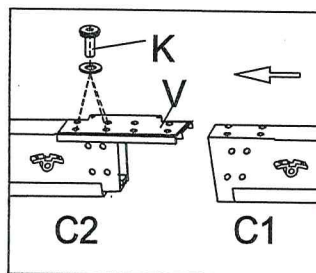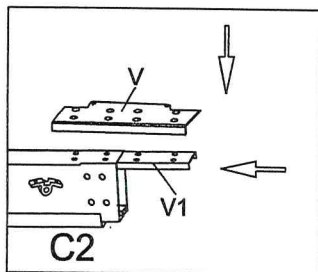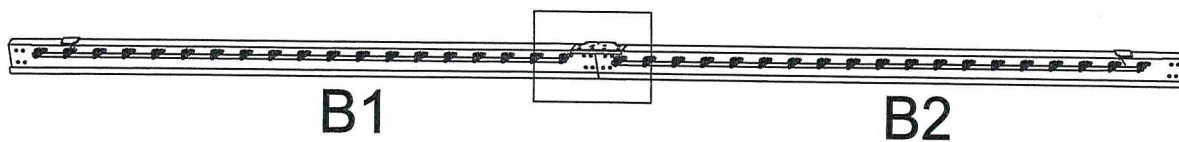








non stringete completamente le viti

ora stringete tutte le viti

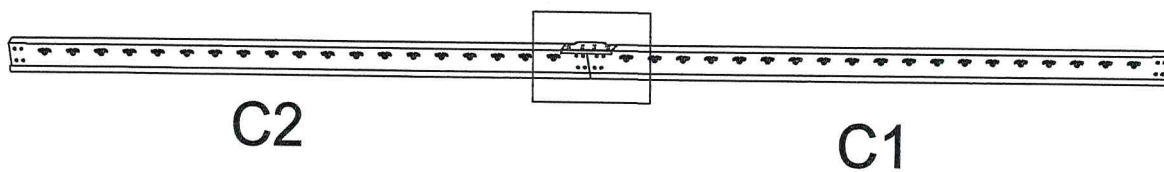






PASSO 4:

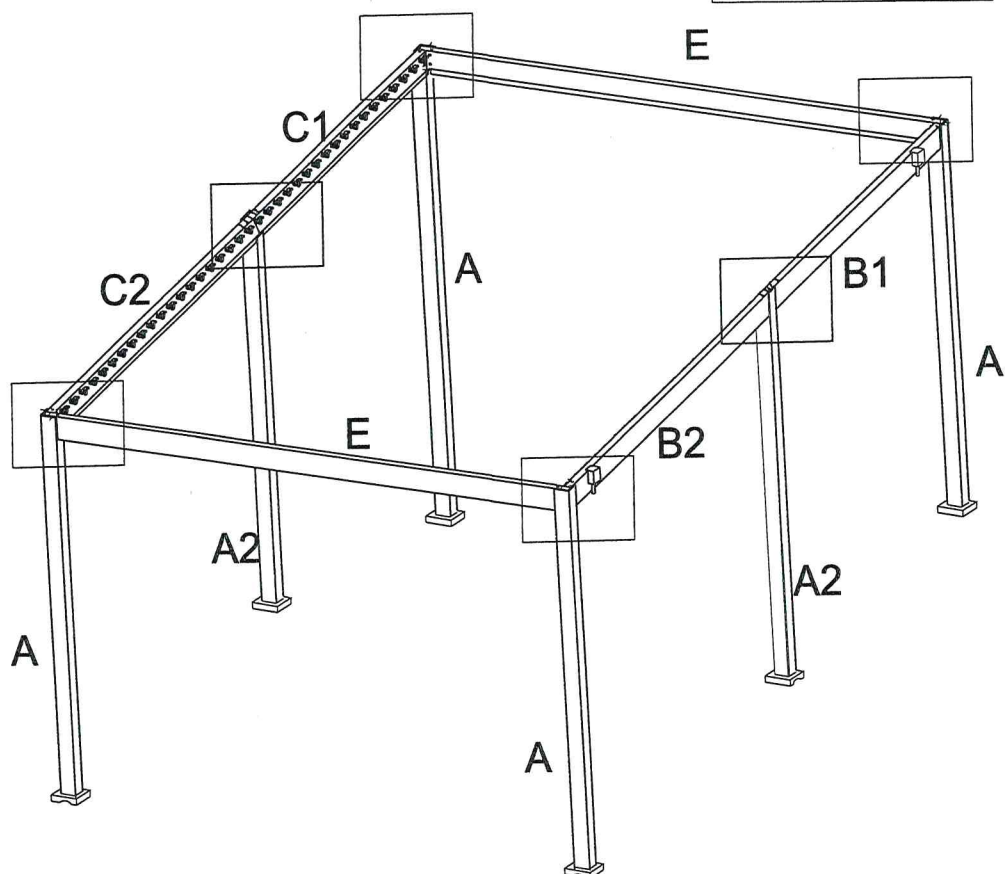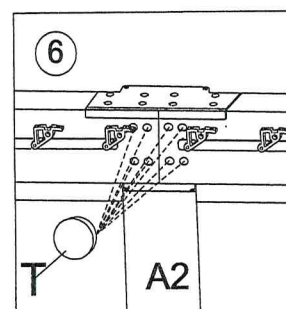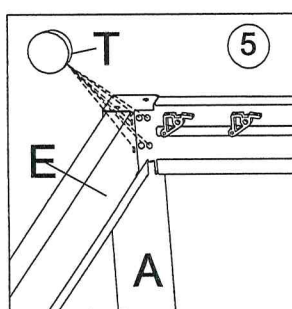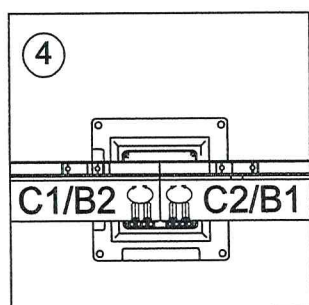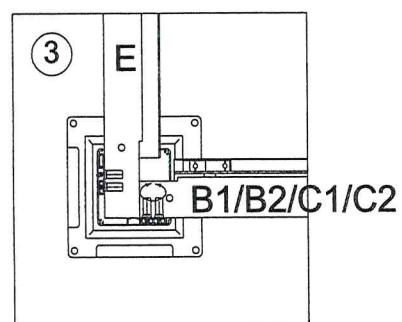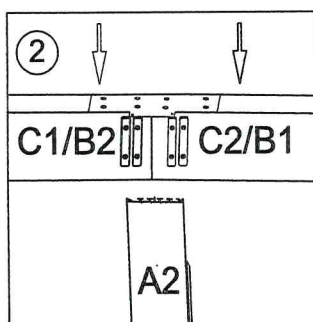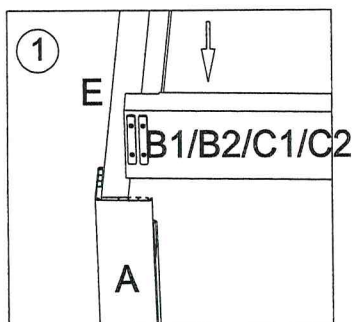



PASSO 5:


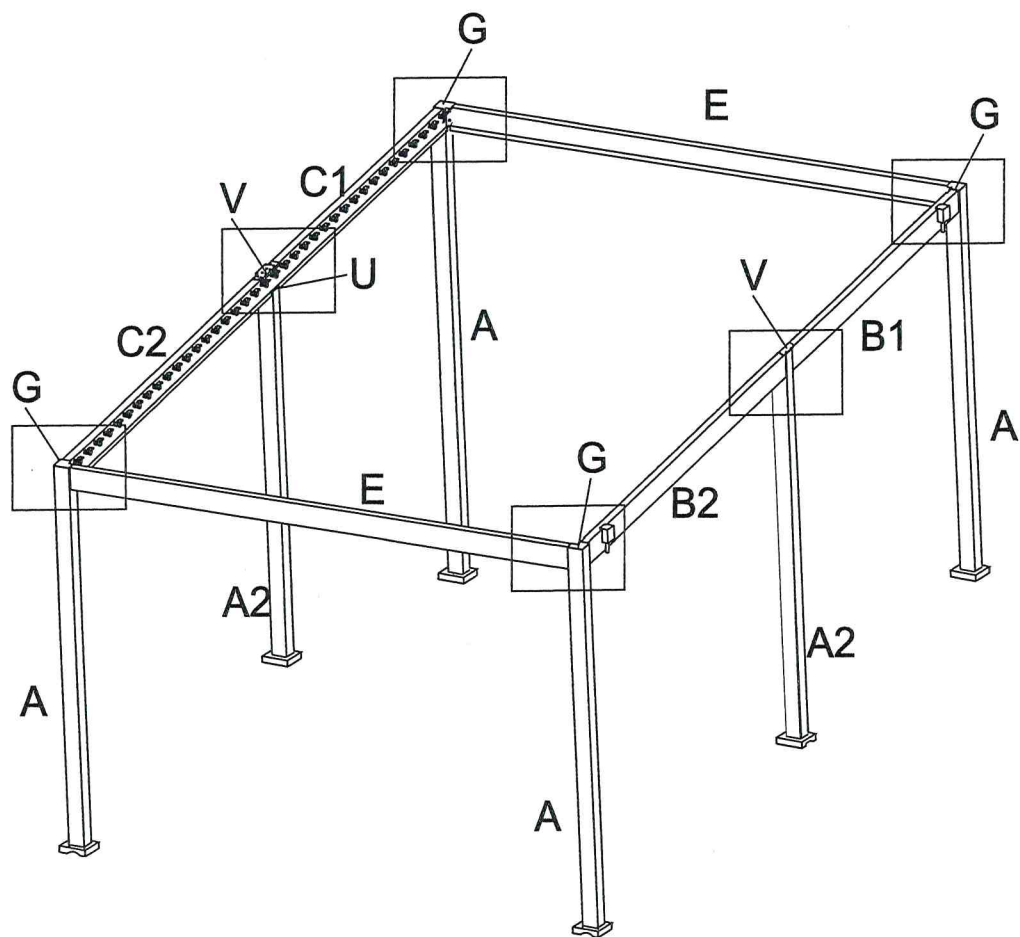
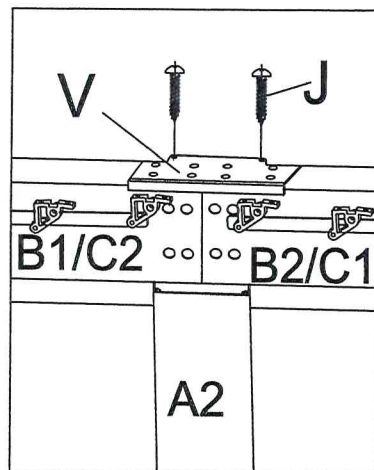
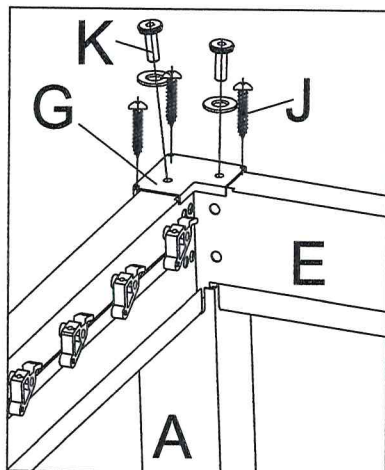






S x76




F x38

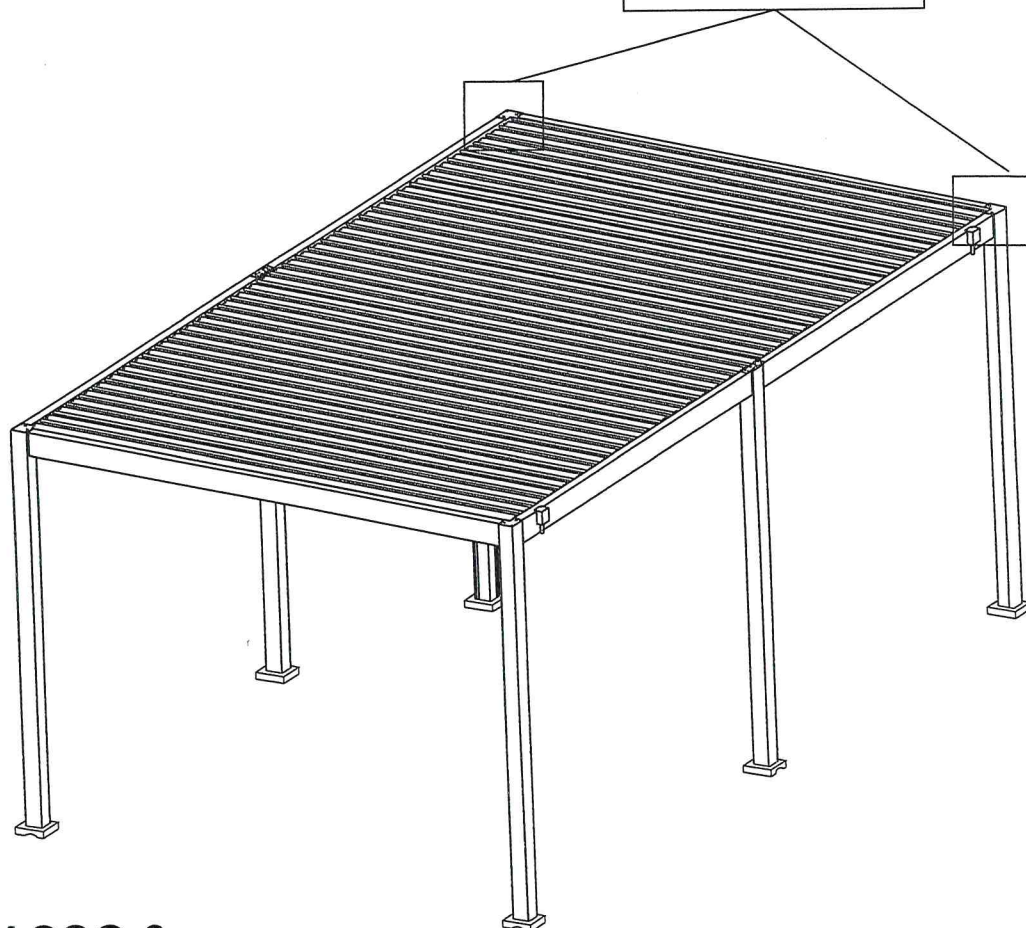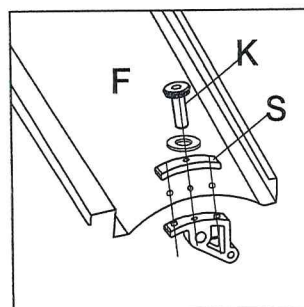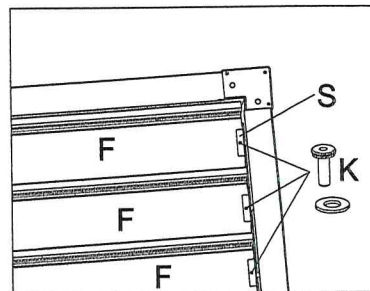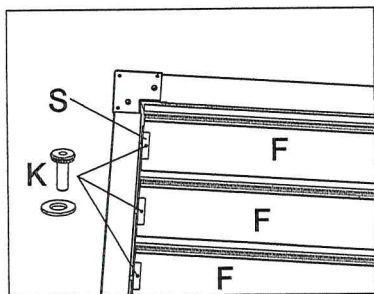




PASSO 6:

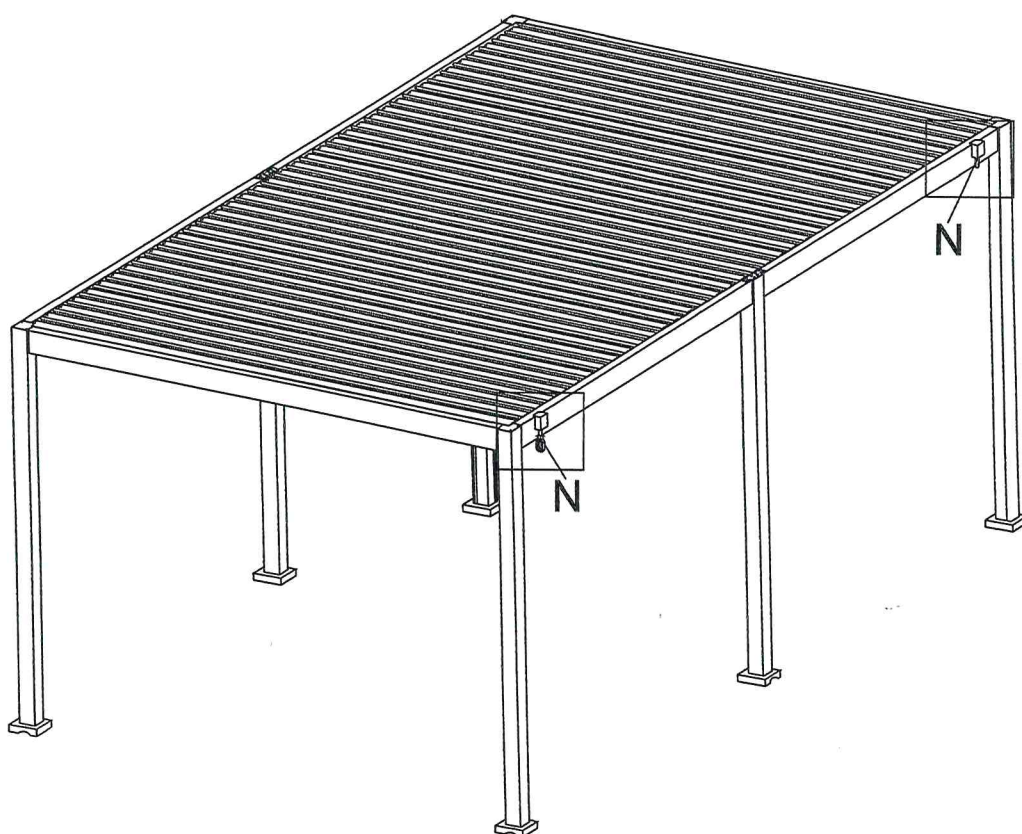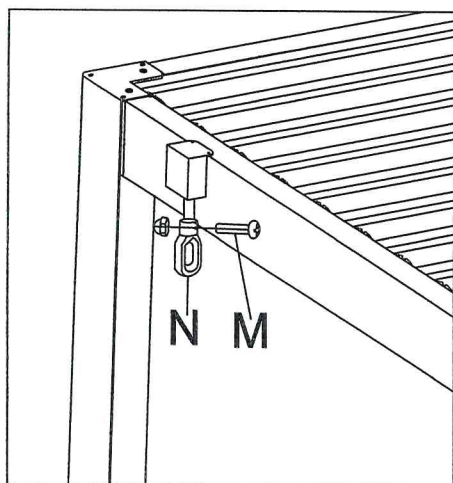




PASSO 7:






1 (x2)

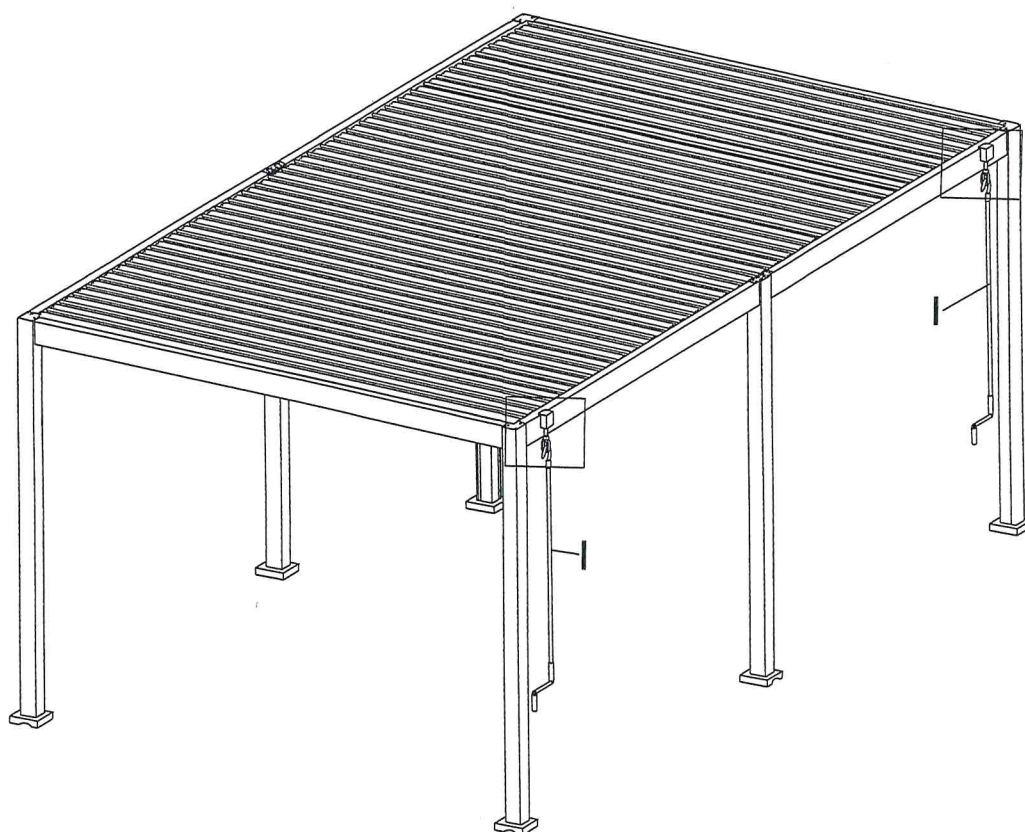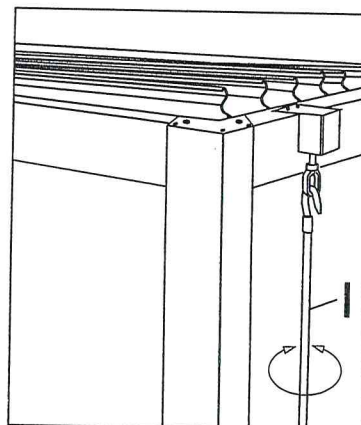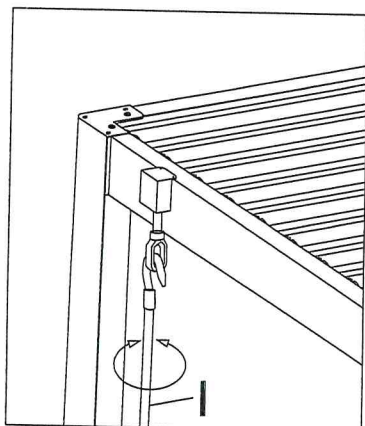


PASSO 8:

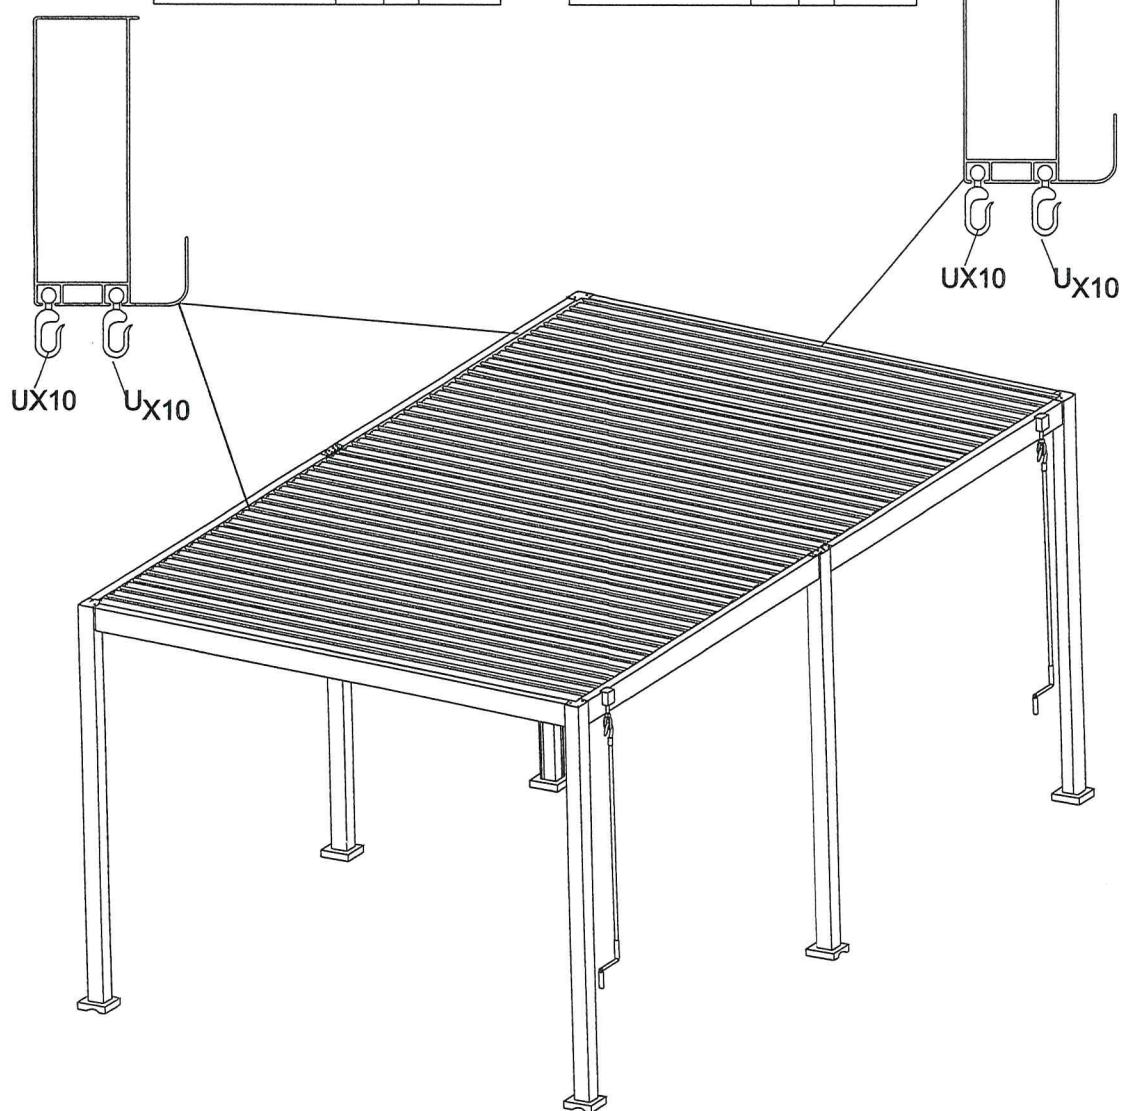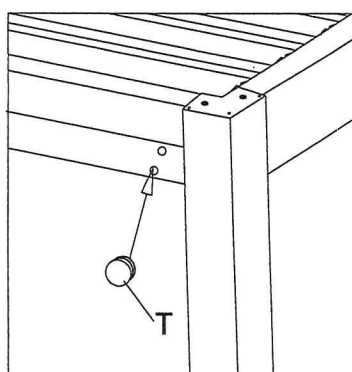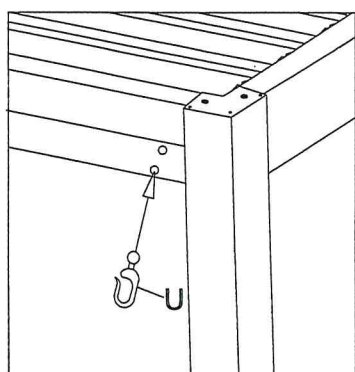




PASSO 9:

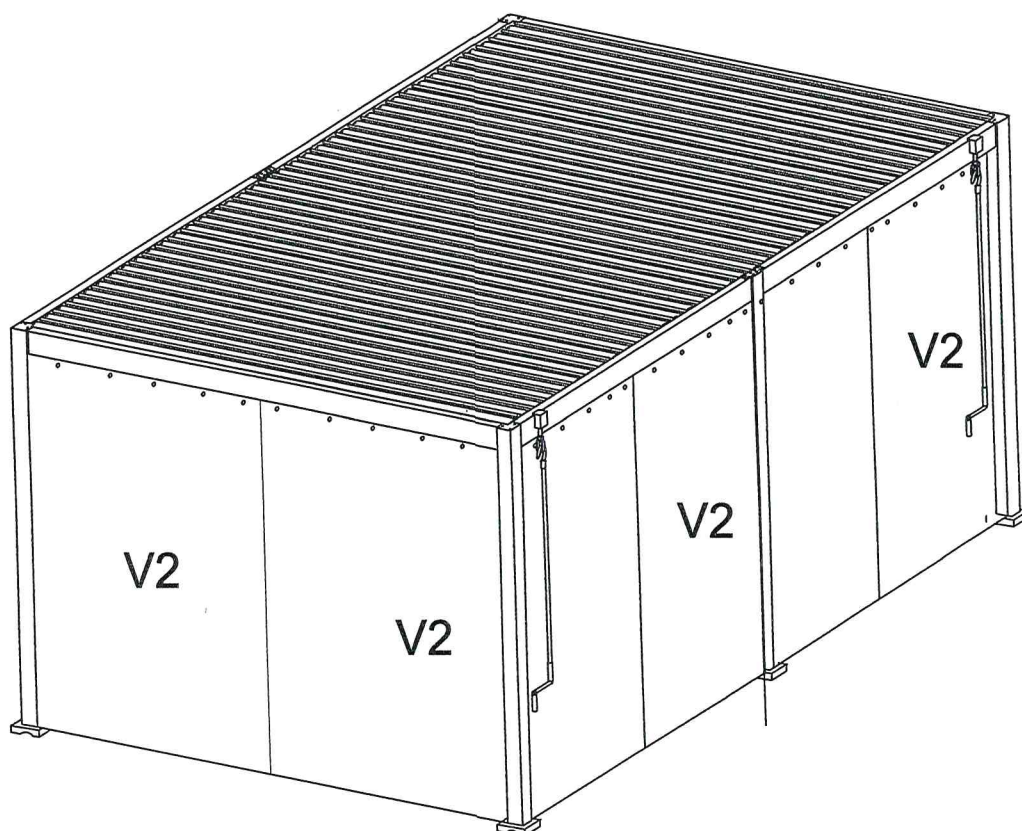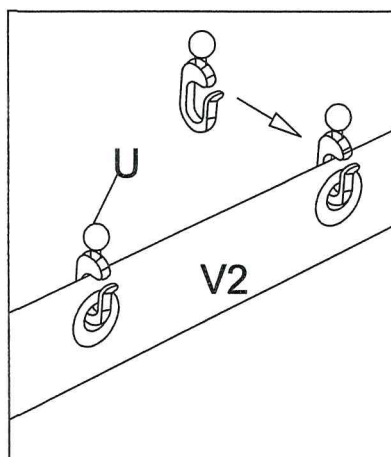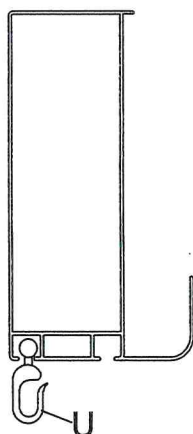


PASSO 10:





W x6

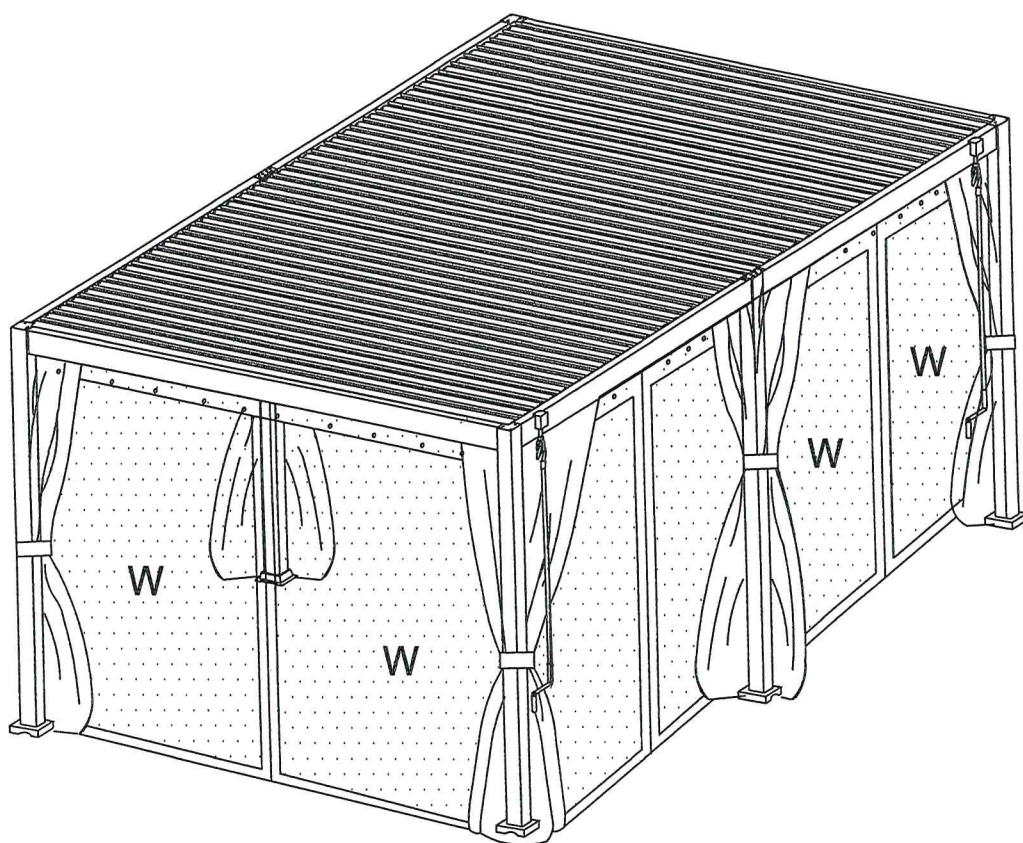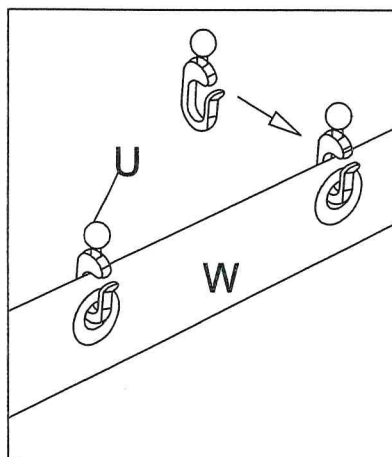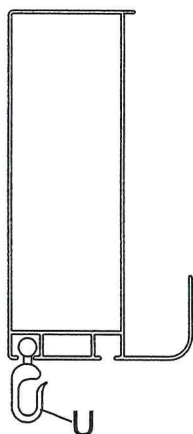

PASSO 11:



L (x24)

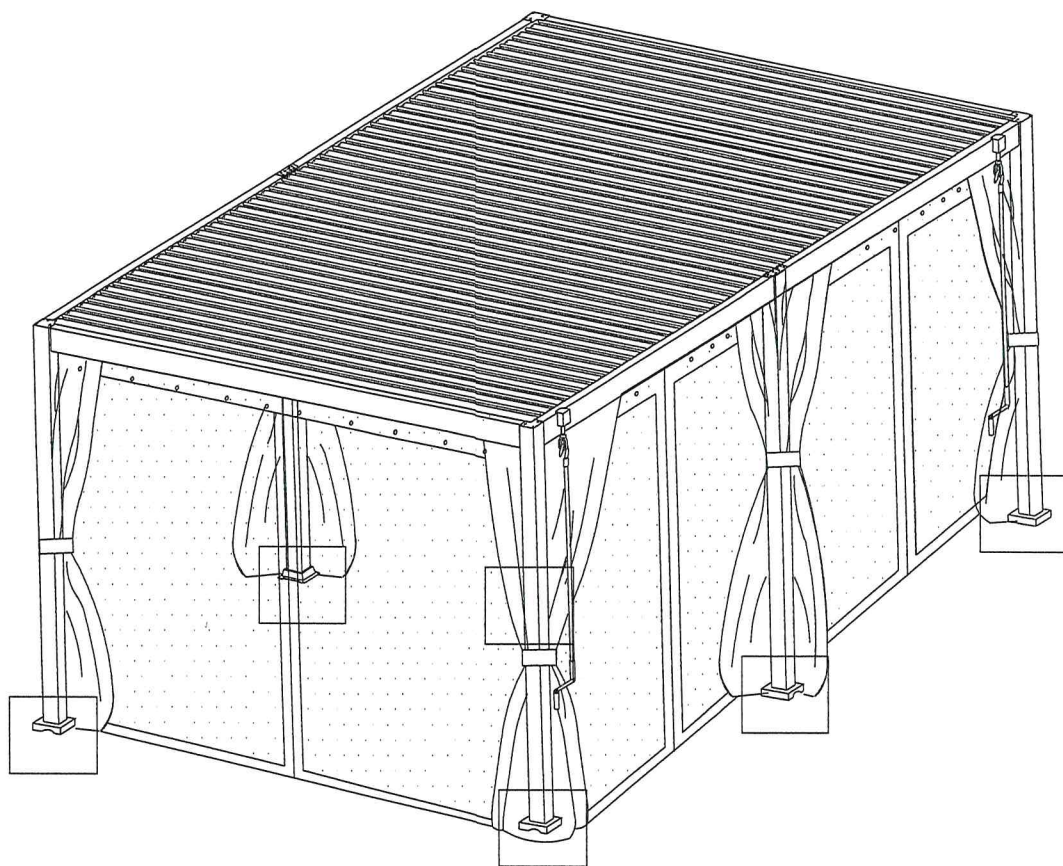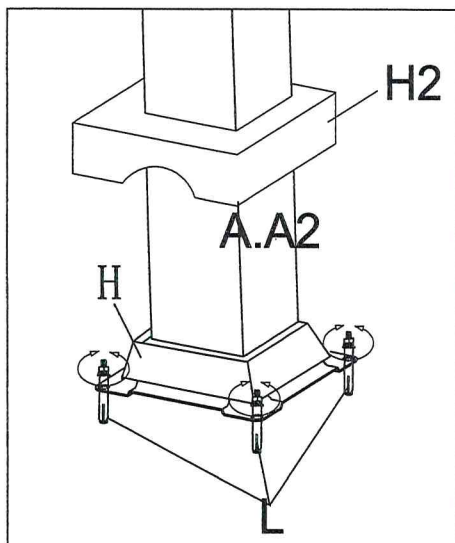

PASSO 12: