

ASSEMBLY INSTRUCTIONS

ART NO.B1974001 - WORKBENCH

PART LIST



A - Beam X2



B - Column X2



C - MDF Top



D - Bottom shelf X1



E - Feet X4




F - M8 Screw X12



G - M6 Screw X6

ASSEMBLING

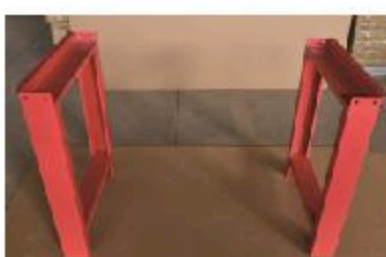


Step 1: Assemble A (2pcs Beam) into B (2pcs Column),
Use 8pcs M8 screws



Step 2: Assembly
D(Bottom shelf) into B
(Column), Use 4pcs
M8 screws



Step 3: Assemble E

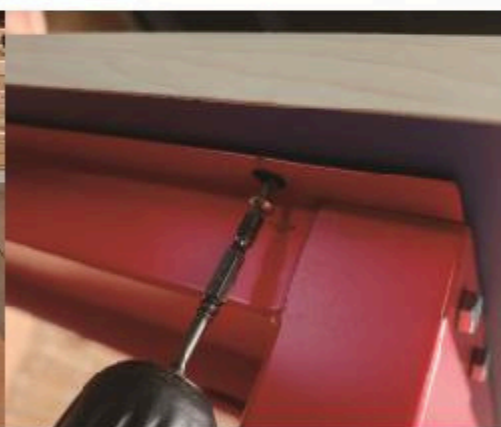

Step 4: Assemble C(MDF TOP), Use 6pcs M6 screws



ISTRUZIONI DI MONTAGGIO

ART NO. B1974001 - BANCO DA LAVORO

PARTI IN DOTAZIONE



A - TRAVI X2




B - STRUTTURA X2



C - RIPIANO IN MDF



D - RIPIANO INFERIORE X1

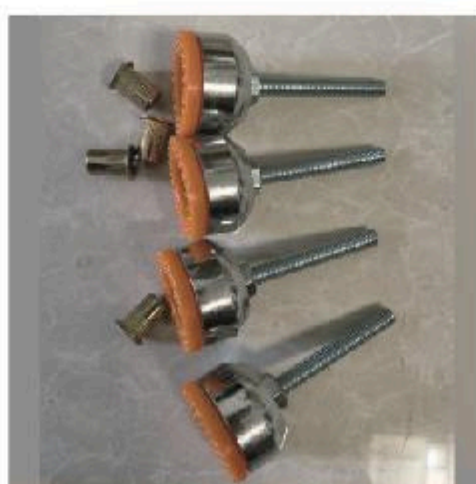

E - PIEDINI X4



F - VITI M8 X12



G - VITI M6 X6

ASSEMBLAGGIO




Step 1: Inserisci A (2pcs TRAVI) in B (2pcs STRUTTURA) usando 8pcs viti M8



Step 2: Assembla D(RIPIANO INF.) e B (COLONNA), usando 4pcs viti M8



Step 3: Assembla E

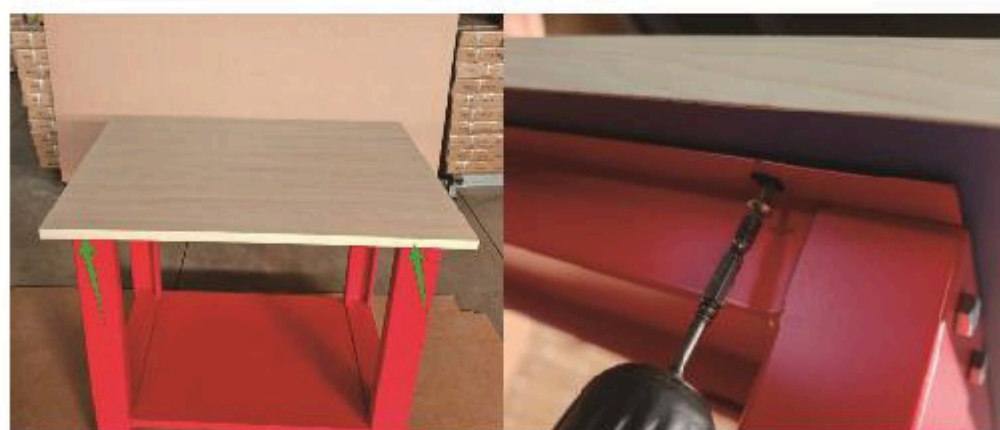

Step 4: Assembla C(TOP IN MDF), usando le 6 M6 viti (G)

